





1 Cut door bottom and vinyl to width of door. Insert vinyl into flange and crimp one end of flange with pliers to hold seal in place. On inswing doors, notch drip cap equal to thickness of the door stop so that door will fit smoothly against door stop when closed.

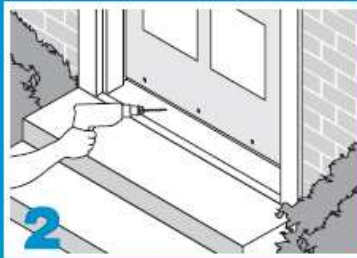

2 With door closed, place door bottom on door. Position door bottom so vinyl seal compresses approximately 1/16" against threshold. Drill pilot holes in center of screw slots and attach door bottom with enclosed screws.

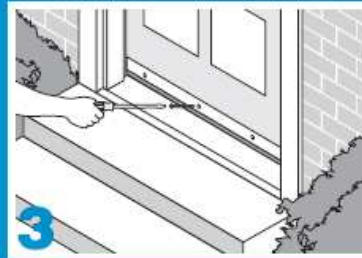

3 Final adjustment of door bottom may be made just prior to tightening of screws.

- 1** Corte la base para puerta y el vinilo al ancho de la puerta. Inserte el vinilo en la brida y apriete un extremo de la brida con un alicate para que mantenga el sello en posición. En puertas que batien hacia adentro, córtale muescas al sello deflector al ancho del tope de la puerta para que encaje suavemente contra el tope de la puerta cuando se cierre.
- 2** Con la puerta cerrada, coloque la base para la puerta de modo que el sello de vinilo se comprima aproximadamente 1,6mm contra el sardinel. Taladre orificios piloto en el centro de las ranuras para los tornillos y fije a la puerta con los tornillos incluidos.
- 3** El ajuste final de la base para puerta puede hacerse justo antes de apretar los tornillos.